

Antennas

***optional accessories:**
ADP UHF (470 - 1075 MHz)
AD 1800 (1400 - 2400 MHz)

www.sennheiser.com/download

Smart Assist

Download on the **App Store** **GET IT ON Google Play**

Sennheiser electronic SE & Co. KG
Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Printed in Germany
Publ. 03/24, 583962/A05

Evolution Wireless Digital
EW-D EM
EW-D SK
EW-D SKM-S

Quick Guide
Kurzanleitung
Guide rapide
Guida rapida
Guía de inicio rápido
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide

Kort vejledning
Pikaohje
Γρήγορος οδηγός
Kisa Kilavuz
Краткая инструкция
快速指南
クイックガイド
퀵 가이드

Audio Out

XLR-3 6.3 mm

OR OR

Power supply

EU US UK AU KOR CN

CLICK!

Smart Assist

The **Smart Assist** app simplifies your workflow

- Smart Assist app provides automated setup, operation and monitoring using any iOS or Android device
- Intelligent setup automatically creates reliable wireless connections, no wireless expertise required
- Mobile access to all system settings centralizes control and eliminates the need for complicated menu navigation on each device
- Easy frequency allocation and wireless channel naming help to keep systems organized

Download on the **App Store** **GET IT ON Google Play**

In the box

Rack mount angles
Power supply adapters
Power supply

Battery

1 2 3

2 AA batteries (included) *optional: BA 70 rechargeable battery

Battery

1 2 3 4

2 AA batteries (included) *optional: BA 70 rechargeable battery

EW-D EM

LINK LED DATA LED UP DOWN SYNC ON/OFF SET ESC

antenna inputs audio outputs power supply

On/Off

EM Off -> On

EM/SK/SKM-S
short on

SKM-S On -> Off

EM/SK/SKM-S
long off

SK

Identify/Battery check

On -> Identify/Check

SK/SKM-S
short Identify/Check

LINK LED SK/SKM-S		≤ 100 %
		≤ 60 %
		≤ 20 %

Display of synced EM

EW-D SKM-S

ON/OFF LINK LED DATA LED SYNC MUTE

EW-D SK

DATA LED LINK LED SYNC MUTE ON/OFF

Display

Antenna switching diversity, Mute lock, Mute, Frequency, App connection, Key lock, Menu, Radio frequency level, Transmitter audio level, Gain, Audio output level, Channel, Transmitter battery.

RF AF GAIN AF OUT CH BAT

470.200 MHz

24 dB 05 dB 01

GAIN AF OUT MUTE LOCK AUTO SCAN CHANNEL TUNE RESET

Instruction Manual

LEDs

LINK LED	
	- Link ok - audio active
	- Link ok - audio muted or no capsule on SKM
	- Link ok - audio clip
	- No link
	- Link ok - Low transmitter battery
	- No link - Device switched off

DATA LED	
	Bluetooth active to - sync with transmitter - connect with app
	Firmware update in progress

EM

SKM-S

SK

EM: LINK, DATA, RF

SKM-S: DATA, LINK

SK: DATA, LINK

Instruction Manual

Sync

EM: SYNC button

SKM-S: SYNC button

SK: SYNC button

short press

OR

Instruction Manual

Menu

Gain

AF Out

Mute Lock

Auto Scan

Channel

Tune

Reset

RF AF GAIN AF OUT CH BAT

470.200 MHz

24 dB 05 dB 01

GAIN AF OUT MUTE LOCK AUTO SCAN CHANNEL TUNE RESET

473.200 MHz

472.600 MHz

473.200 MHz

NO

YES

Instruction Manual

www.sennheiser.com/download

Instruction manual
Bedienungsanleitung
Notice d'emploi
Istruzioni per l'uso
Instrucciones de manejo
Manual de instruções
Gebruiksaanwijzing
Instrukcja obsługi
Bruksanvisning
Betjenings vejledning
Käyttöohje
Οδηγίες λειτουργίας
Kullanım kılavuzu
Инструкция по эксплуатации
使用说明书
取扱説明書
사용 설명서

Smart Assist

Available on the App Store

ANDROID APP ON Google play

Mute

Mute Lock → Instruction Manual

SK: MUTE button

SKM-S: MUTE button

Instruction Manual

Key lock

press both

unlocked

locked

Instruction Manual

Color coding sets

optional accessories for EM, SK and SKM-S

wireless link 1:

wireless link 2:

etc.

etc.

Instruction Manual

SKM-S

Instruction Manual

ME 2

ME 3

ME 4

25 cm (10")

2...3 cm (1")