

### Antennas

\*optional accessories:  
ADP UHF (470 - 1075 MHz)  
AD 1800 (1400 - 2400 MHz)

[www.sennheiser.com/download](http://www.sennheiser.com/download)

**Smart Assist**

Download on the **App Store**    **GET IT ON Google Play**

Sennheiser electronic SE & Co. KG  
Am Labor 1, 30900 Wedemark, Germany  
[www.sennheiser.com](http://www.sennheiser.com)

Printed in Germany  
Publ. 03/24, 583962/A05

### Evolution Wireless Digital

EW-D EM  
EW-D SK  
EW-D SKM-S

Quick Guide  
Kurzanleitung  
Guide rapide  
Guida rapida  
Guía de inicio rápido  
Guia rápido  
Beknopte handleiding  
Krótka instrukcja obsługi  
Snabbguide

Kort vejledning  
Pikaohje  
Γρήγορος οδηγός  
Kisa Kilavuz  
Краткая инструкция  
快速指南  
クイックガイド  
퀵 가이드

### Audio Out

XLR-3    6.3 mm

OR    OR

### Power supply

EU    US    UK    AU    KOR    CN

CLICK!

### Smart Assist

The **Smart Assist** app simplifies your workflow

- Smart Assist app provides automated setup, operation and monitoring using any iOS or Android device
- Intelligent setup automatically creates reliable wireless connections, no wireless expertise required
- Mobile access to all system settings centralizes control and eliminates the need for complicated menu navigation on each device
- Easy frequency allocation and wireless channel naming help to keep systems organized

Download on the **App Store**    **GET IT ON Google Play**

### In the box

Rack mount angles  
Power supply adapters  
Power supply

### Battery

1    2    3

2 AA batteries (included)    \*optional: BA 70 rechargeable battery

### Battery

1    2    3    4

2 AA batteries (included)    \*optional: BA 70 rechargeable battery

### EW-D EM

LINK LED    DATA LED    UP    DOWN    SYNC    ON/OFF    SET    ESC

antenna inputs    audio outputs    power supply

### On/Off

Off -> On

**EM/SK/SKM-S**  
short on

On -> Off

**EM/SK/SKM-S**  
long off

EM    SKM-S    SK

### Identify/Battery check

On -> Identify/Check

**SK/SKM-S**  
short Identify/Check

LINK LED SK/SKM-S		≤ 100 %
		≤ 60 %
		≤ 20 %

Display of synced EM

SKM-S    SK

### EW-D SKM-S

ON/OFF    LINK LED    DATA LED    SYNC    MUTE

### EW-D SK

DATA LED    LINK LED    SYNC    MUTE    ON/OFF

### Display

Labels on the display:

- Antenna switching diversity
- Mute lock
- Mute
- Frequency
- App connection
- Key lock
- Menu
- Radio frequency level
- Transmitter audio level
- Gain
- Audio output level
- Channel
- Transmitter battery

Instruction Manual

### LEDs

LINK LED	EM
- Link ok	- Link ok
- Link ok	- audio active
- Link ok	- audio muted or no capsule on SKM
- Link ok	- audio clip
- No link	- No link
- Link ok	- Low transmitter battery
- No link	- Device switched off

DATA LED

	Bluetooth active to - sync with transmitter - connect with app
	Firmware update in progress

EM, SKM-S, SK

DATA, LINK

Instruction Manual

### Sync

EM, SKM-S, SK

short press

Instruction Manual

### Menu

Gain

AF Out

Mute Lock

Auto Scan

Channel

Tune

Reset

Instruction Manual

www.sennheiser.com/download

Instruction manual  
Bedienungsanleitung  
Notice d'emploi  
Istruzioni per l'uso  
Instrucciones de manejo  
Manual de instruções  
Gebruiksaanwijzing  
Instrukcja obsługi  
Bruksanvisning  
Betjenings vejledning  
Käyttöohje  
Οδηγίες λειτουργίας  
Kullanım kılavuzu  
Инструкция по эксплуатации  
使用说明书  
取扱説明書  
사용 설명서

Smart Assist

Available on the App Store

ANDROID APP ON Google play

### Mute

Mute Lock

Instruction Manual

SK, SKM-S

### Key lock

press both

unlocked

locked

Instruction Manual

### Color coding sets

optional accessories for EM, SK and SKM-S

wireless link 1

wireless link 2

etc.

Instruction Manual

### SKM-S

Instruction Manual

ME 2

ME 3

ME 4

25 cm (10")

2...3 cm (1")