

Antennas

*optional accessories:
ADP UHF (470 - 1075 MHz)
AD 1800 (1400 - 2400 MHz)

www.sennheiser.com/download

Smart Assist

Download on the **App Store** GET IT ON **Google Play**

Sennheiser electronic SE & Co. KG
Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Printed in Germany
Publ. 03/24, 583962/A05

Evolution Wireless Digital
EW-D EM
EW-D SK
EW-D SKM-S

Quick Guide
Kurzanleitung
Guide rapide
Guida rapida
Guía de inicio rápido
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide

Kort vejledning
Pikaohje
Γρήγορος οδηγός
Kisa Kilavuz
Краткая инструкция
快速指南
クイックガイド
퀵 가이드

SENNHEISER

Audio Out

XLR-3 6.3 mm

OR OR

Power supply

EU US UK AU KOR CN

Smart Assist

The **Smart Assist** app simplifies your workflow

- Smart Assist app provides automated setup, operation and monitoring using any iOS or Android device
- Intelligent setup automatically creates reliable wireless connections, no wireless expertise required
- Mobile access to all system settings centralizes control and eliminates the need for complicated menu navigation on each device
- Easy frequency allocation and wireless channel naming help to keep systems organized

Download on the **App Store** GET IT ON **Google Play**

In the box

Rack mount angles
Power supply adapters
Power supply

Battery

2 AA batteries (included) *optional: BA 70 rechargeable battery

Battery

2 AA batteries (included) *optional: BA 70 rechargeable battery

EW-D EM

LINK LED DATA LED UP DOWN SYNC ON/OFF SET ESC

antenna inputs audio outputs power supply

On/Off

Off -> On

EM/SK/SKM-S
short on

On -> Off

EM/SK/SKM-S
long off

Identify/Battery check

On -> Identify/Check

SK/SKM-S
short Identify/Check

LINK LED SK/SKM-S	≤ 100 %
LINK LED SK/SKM-S	≤ 60 %
LINK LED SK/SKM-S	≤ 20 %

Display of synced EM

EW-D SKM-S

ON/OFF LINK LED DATA LED SYNC MUTE

EW-D SK

DATA LED LINK LED SYNC MUTE ON/OFF

