

### Antennas

\*optional accessories:  
ADP UHF (470 - 1075 MHz)  
AD 1800 (1400 - 2400 MHz)

www.sennheiser.com/download

**Smart Assist**

Download on the **App Store** GET IT ON **Google Play**

Sennheiser electronic SE & Co. KG  
Am Labor 1, 30900 Wedemark, Germany  
www.sennheiser.com

Printed in Germany  
Publ. 03/24, 583962/A05

**Evolution Wireless Digital**  
EW-D EM  
EW-D SK  
EW-D SKM-S

Quick Guide  
Kurzanleitung  
Guide rapide  
Guida rapida  
Guía de inicio rápido  
Guia rápido  
Beknopte handleiding  
Krótka instrukcja obsługi  
Snabbguide

Kort vejledning  
Pikaohje  
Γρήγορος οδηγός  
Kisa Kilavuz  
Краткая инструкция  
快速指南  
クイックガイド  
퀵 가이드

**SENNHEISER**

### Audio Out

XLR-3 6.3 mm

OR OR

### Power supply

EU US UK AU KOR CN

### Smart Assist

The **Smart Assist** app simplifies your workflow

- Smart Assist app provides automated setup, operation and monitoring using any iOS or Android device
- Intelligent setup automatically creates reliable wireless connections, no wireless expertise required
- Mobile access to all system settings centralizes control and eliminates the need for complicated menu navigation on each device
- Easy frequency allocation and wireless channel naming help to keep systems organized

Download on the **App Store** GET IT ON **Google Play**

### In the box

Rack mount angles  
Power supply adapters  
Power supply

### Battery

1 2 3

2 AA batteries (included) \*optional: BA 70 rechargeable battery

### Battery

1 2 3 4

2 AA batteries (included) \*optional: BA 70 rechargeable battery

### EW-D EM

LINK LED DATA LED UP DOWN SYNC ON/OFF SET ESC

audio outputs power supply antenna inputs

### On/Off

Off -> On

**EM/SK/SKM-S**  
short on

On -> Off

**EM/SK/SKM-S**  
long off

### Identify/Battery check

On -> Identify/Check

**SK/SKM-S**  
short Identify/Check

LINK LED SK/SKM-S		≤ 100 %
		≤ 60 %
		≤ 20 %

Display of synced EM

### EW-D SKM-S

ON/OFF LINK LED DATA LED SYNC MUTE

### EW-D SK

DATA LED LINK LED SYNC MUTE ON/OFF

### Display

Antenna switching diversity

Mute lock

Mute

Frequency

App connection

Key lock

Menu

Radio frequency level

Transmitter audio level

Gain

Audio output level

Channel

Transmitter battery

Instruction Manual

### LEDs

LINK LED	EM
- Link ok	- Link ok
- audio active	- audio muted or no capsule on SKM-S
- Link ok	- Link ok
- audio muted or no capsule on SKM-S	- audio clip
- Link ok	- No link
- audio clip	- Link ok
- No link	- Low transmitter battery
- Link ok	- No link
- Low transmitter battery	- Device switched off
- No link	
- Device switched off	

DATA LED

	Bluetooth active to - sync with transmitter - connect with app
	Firmware update in progress

EM

SKM-S

SK

Instruction Manual

### Sync

EM

SKM-S

SK

short press

short press

short press

Instruction Manual

### Menu

Gain

AF Out

Mute Lock

Auto Scan

Channel

Tune

Reset

Instruction Manual

www.sennheiser.com/download

Instruction manual  
Bedienungsanleitung  
Notice d'emploi  
Istruzioni per l'uso  
Instrucciones de manejo  
Manual de instruções  
Gebruiksaanwijzing  
Instrukcja obsługi  
Bruksanvisning  
Betjenings vejledning  
Käyttöohje  
Οδηγίες λειτουργίας  
Kullanım kılavuzu  
Инструкция по эксплуатации  
使用说明书  
取扱説明書  
사용 설명서

Smart Assist

Available on the App Store

ANDROID APP ON Google play

### Mute

Mute Lock

Instruction Manual

SK

SKM-S

### Key lock

press both

unlocked

locked

Instruction Manual

### Color coding sets

optional accessories for EM, SK and SKM-S

wireless link 1:

wireless link 2:

etc.

etc.

Instruction Manual

### SKM-S

Instruction Manual

### ME 2

### ME 3

### ME 4

25 cm (10")

2...3 cm (1")