



XS WIRELESS 1

Quick Guide | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Pikaohje | Γρήγορος οδηγός | Kısa Kılavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서

In the box	Vocal Sets		Instrument Sets		Lavalier Set	Headmic Set
	XSW 1-825	XSW 1-835	XSW 1-C11	XSW 1-908	XSW 1-ME2	XSW 1-ME3
XS WIRELESS 1 	•	•	•	•	•	•
EM-XSW 1 	•	•	•	•	•	•
	•	•	•	•	•	•
	•	•	•	•	•	•
MZQ 1 	•	•	•	•	•	•
	•	•	•	•	•	•
SK-XSW 	•	•	•	•	•	•
e 908T 	•	•	•	•	•	•
ME 2-2 	•	•	•	•	•	•
ME 3-II 	•	•	•	•	•	•
CI 1-N 	•	•	•	•	•	•
2 x AA LR6 1.5 V 	•	•	•	•	•	•

Battery

- Slide the battery cover open.
- Insert the battery with the correct polarity.
- Slide the battery cover closed.

Low Battery

Bank 1 Ch. 1
925.300 MHz

- ~ 10 h
- ~ 7 h
- ~ 3 h
- Low Batt

Setup

XLR-3 OR 6.3 mm

Line Mic

EU US UK AU CN KOR

ME 2-2 e 908T ME 3-II CI 1-N

On/off

1s on 3s off

OR

Bank 1 Ch. 1 925.300 MHz

Display

EM-XSW 1

Bank 1...8 Channel 0...9

Sensitivity Sync Low battery

Volume

0...9

Mute

Audio on

Audio off

Sennheiser electronic GmbH & Co. KG

Change frequency

Automatically/Scan

1. Turn the device **Off**.
2. Press **Set/Scan** for 3s.
3. The display shows **23**.
4. Press **Set/Scan** again. A green checkmark appears.

Manually

Bank Channel

1. Press **Set/Scan**.
2. The display shows **13**. Press **CH+**.
3. The display shows **23**. Press **Set/Scan**.
4. Press **CH+** again.
5. Press **Set/Scan**. A green checkmark appears.

Sync

Step 1: Turn the device **Off**. Press **Set/Scan** for 3s. The display shows **23**. Press **Set/Scan** again. A red 'X' indicates failure. Press **Set/Scan** for 3s. The display shows **23**. Press **Set/Scan** again. A green checkmark indicates success.

Step 2: Press **Set/Scan** for 3s. The display shows **23**. Press **Set/Scan** again. A green checkmark indicates success.

Step 3: Press **Set/Scan** for 3s. The display shows **23**. Press **Set/Scan** again. A green checkmark indicates success.

Sensitivity

Level

- 0 dB
- 10 dB
- 20 dB
- 30 dB

OR

Multichannel

Bank 1...8
Ch. 0...9

max. 10 ch.

Bank	CH.	Bank	CH.	Bank	CH.	Bank	CH.	
23		24		25		26		✓
11		12		13		18		✓
23		13		47		89		✗
23		23		23		23		✗

ME 2-2

25 cm (10")

ME 3-II

2...3 cm (1")

Min. distance

> 5 m (16'5")

SKM

Guitar pickup

> 20 cm (8")

Squelch

min. SQ

max. SQ

