

### On/Off

**EK**

**SKP**

**SKM-S**

**SK**

Off -> On

**EK/SKP/SK/SKM-S**

short on

On -> Off

**EK/SKP/SK/SKM-S**

long off

### EK Setup

3.5 mm

3.5 mm

3.5 mm

XLR

OR

[www.sennheiser.com/download](http://www.sennheiser.com/download)

**Smart Assist**

Download on the **App Store**

**GET IT ON Google Play**

Sennheiser electronic SE & Co. KG

Am Labor 1, 30900 Wedemark, Germany  
[www.sennheiser.com](http://www.sennheiser.com)

Printed in Germany  
Publ. 05/24, 592859/A05

## Evolution Wireless Digital Portable

EW-DP EK, EW-D SK, EW-DP SKP, EW-D SKM-S

Quick Guide  
Kurzanleitung  
Guide rapide  
Guida rapida  
Guía de inicio rápido  
Guia rápido  
Beknopte handleiding  
Krótka instrukcja obsługi  
Snabbguide

Kort vejledning  
Pikaohje  
Γρήγορος οδηγός  
Kisa Kilavuz  
Краткая инструкция  
簡要說明  
快速使用指南  
クイックガイド  
요약 안내서

### Mute

**SK**

**SKP**

**SKM-S**

### EK Power Supply / Charging

USB-C Power

Powerbank

### EW-DP EK

LINK LED

DATA LED

UP

DOWN

SET

SYNC

ESC ON/OFF

Headphone Output

USB-C Power/Charging

MIC OUT

USB POWER

Microphone Output

### Battery

**EK**

optional: 2 AA batteries

BA 70 rechargeable battery (included)

insert batteries simultaneously

### Battery

**SKP**

2 AA batteries (included)

optional: BA 70 rechargeable battery

### EW-DP SKP

SYNC

REC

48V

Phantom power

ON/OFF

MUTE

MICROPHONE INPUT

MIC

Micro-SD Slot

microSD

micro

Battery slot

FIX/UNFIX

3-poles XLR plug

unbalanced Input

PIN 1	↓
PIN 2	- (P48)
PIN 3	+

### Battery

**SK**

2 AA batteries (included)

\*optional: BA 70 rechargeable battery

### Battery

**SKM-S**

2 AA batteries (included)

\*optional: BA 70 rechargeable battery

### EW-D SKM-S

ON/OFF

DATA LED

SYNC

LINK LED

MUTE

### EW-D SK

DATA LED

LINK LED

SYNC

MUTE

ON/OFF

### EK Display

Default screen

Labels on the display:

- Display page
- Mute switch
- Receiver battery (EK)
- Transmitter battery (SK or SKM-S)
- Transmitter audio level
- PEAK display
- Frequency
- Channel
- Gain
- Radio frequency level

Buttons: SET, ESC, SYNC

Instruction Manual icon

### LEDs

LINK LED/ PWR LED (SKP)	Meaning
	- Link ok - audio active
	- Link ok - audio muted or no capsule on SKM
	- Link ok - audio clip
	- No link
	- Link ok - Low transmitter battery
	- Device switched off

  

DATA LED	Meaning
	Bluetooth active to - sync with transmitter - connect with app
	Firmware update in progress

  

Buttons: LINK, DATA, SKM-S, SK, EK

### Identify/Battery check

On -> Identify/Check

**SK/SKP/SKM-S**

short Identify/Check

LINK LED SK/SKP/SKM-S	Level
	≤ 100 %
	≤ 60 %
	≤ 20 %

Display of synced EK

### EK Menu

www.sennheiser.com/download

Instruction manual  
Bedienungsanleitung  
Notice d'emploi  
Istruzioni per l'uso  
Instrucciones de manejo  
Manual de instruções  
Gebruiksaanwijzing  
Instrukcja obsługi  
Bruksanvisning  
Betjenings vejledning  
Käyttöohje  
Οδηγίες λειτουργίας  
Kullanım kılavuzu  
Инструкция по эксплуатации  
使用说明书  
取扱説明書  
사용 설명서

Smart Assist  
Available on the App Store  
ANDROID APP ON Google play

Gain	Output level	Gain +21 dB
Output level	Headphone	Output level -15 dB
Headphone	Mute switch	Headphone
Mute switch	Auto scan	Mute switch ignored
Auto scan	Channel	Auto scan 526.000 MHz (94)
Channel	Frequency	Channel 94 526.000 MHz
Frequency	Brightness	Frequency 471 470.200 MHz
Brightness	Reset	Brightness 80 60 %
Reset		Reset to factory defaults?

### EK Stacking/ Mounting plate

Mounting instructions icon

### SKP Attach & Record

Attach microphone

XLR-Mic

- 1 insert Micro SD-Card
- 2 long-long press (11 sec.) ▶ format Micro SD-Card
- 3 short press ▶ start Rec.
- 4 long press (3 sec.) ▶ stop Rec.

Record

Rec LED Pattern icon Online Manual icon

### Mic Handling

SKM-S

ME 2

ME 3

ME 4

25 cm (10")

2...3 cm (1")