

### On/Off

**EK**

**SKP**

**SKM-S**

**SK**

Off -> On

**EK/SKP/SK/SKM-S**

short on

On -> Off

**EK/SKP/SK/SKM-S**

long off

### EK Setup

3.5 mm

3.5 mm

3.5 mm

XLR

OR

[www.sennheiser.com/download](http://www.sennheiser.com/download)

**Smart Assist**

Download on the **App Store**

**GET IT ON Google Play**

Sennheiser electronic SE & Co. KG

Am Labor 1, 30900 Wedemark, Germany  
[www.sennheiser.com](http://www.sennheiser.com)

Printed in Germany  
Publ. 05/24, 592859/A05

## Evolution Wireless Digital Portable

EW-DP EK, EW-D SK, EW-DP SKP, EW-D SKM-S

Quick Guide

Kurzanleitung

Guide rapide

Guida rapida

Guía de inicio rápido

Guia rápido

Beknopte handleiding

Krótká instrukcja obsługi

Snabbguide

Kort vejledning

Pikaohje

Γρήγορος οδηγός

Kisa Kilavuz

Краткая инструкция

簡要説明

快速使用指南

クイックガイド

요약 안내서

### Mute

**SK**

**SKP**

**SKM-S**

### EK Power Supply / Charging

USB-C Power

Powerbank

### EW-DP EK

LINK LED

DATA LED

UP

DOWN

SET

SYNC

ESC ON/OFF

Headphone Output

USB-C Power/Charging

MIC OUT

USB POWER

Microphone Output

### Battery

**EK**

optional: 2 AA batteries

BA 70 rechargeable battery (included)

insert batteries simultaneously

### Battery

**SKP**

2 AA batteries (included)

optional: BA 70 rechargeable battery

### EW-DP SKP

SYNC

Phantom power

ON/OFF

REC

MUTE

Micro-SD Slot

Micro-SD

MIC

Microphone Input

48V

micro

Battery slot

FIX/UNFIX

3-poles XLR plug

unbalanced Input

PIN 1	↓
PIN 2	- (P48)
PIN 3	+

### Battery

**SK**

2 AA batteries (included)

\*optional: BA 70 rechargeable battery

### Battery

**SKM-S**

2 AA batteries (included)

\*optional: BA 70 rechargeable battery

### EW-D SKM-S

ON/OFF

DATA LED

SYNC

LINK LED

MUTE

### EW-D SK

DATA LED

LINK LED

SYNC

MUTE

ON/OFF

