

INSTRUCTION MANUAL

HEADSET MICROPHONE

YP-M301


Thank you for purchasing TOA's Headset Microphone.

Please carefully follow the instructions in this manual to ensure long, trouble-free use of your equipment.

1. GENERAL DESCRIPTION

The YP-M301 is a headset microphone designed to be exclusively used with an optional WM-1100 Portable Transmitter.

2. NOMENCLATURE

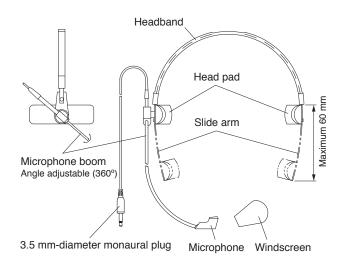

4. SPECIFICATIONS

Туре	Electret condenser type			
Directivity	Unidirectional			
Sensitivity	-46 dB (0 dB=1 V/Pa,			
	1 kHz, load: 2 kΩ)			
Maximum Input Sound	117 dB SPL			
Pressure				
Terminal	ø3.5 mm monaural plug			
Cord Length	1.2 m			
Finish	Headband: ABS resin,			
	black			
Weight	45 g (cable included)			

Note: The design and specifications are subject to change without notice for improvement.

Accessories

Storage case	 	 	 1	
Windscreen				

3. HOW TO USE

- Put on the headset and adjust the slide arms so that the head pads are positioned just over the ears.
- Adjust a microphone boom, and position the microphone (windscreen attached) at the mouth.
- Keep the microphone 3 5 cm away from the mouth when using.
- Speaking loud or positioning the microphone too close to the mouth could muffle sounds and make them inaudible.
- The headset is not recommended for use in aerobics or other vigorous performance applications.
- · Use the supplied case when storing the unit.

URL: http://www.toa.jp/